



## 1. First use (Connect the remote control)

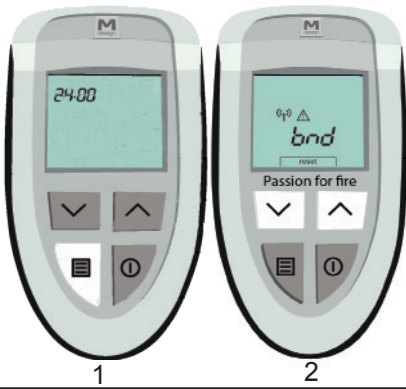

Keep pressing the  button until 24:00 appears in the top left corner (1).

Press several times on  until you see "bnd" on the screen (2)

Press shortly on



You see the temperature on the screen. Your remote control is now connected.

## 2. Ignite the fire



Press simultaneously on  and 

You hear the ticking of the start pilot. The ticking lasts for about 25 sec.


At initial setup, it's possible that the pilot flame doesn't ignite immediately because the pipes are not yet fully deflated. You can try this up to 5 times before the unit will be placed in safety. If this fails, please contact your installer.

## 3. Manual control ( 1 burner )



From the moment you have a pilot light, you can start with the flame height control.

The screen will automatically show manual control ( flame height control )

Press on  until you see number 15.

This is the maximum flame height.

You choose a flame height from 1 to 15

by pressing  or 


## 4. Manual control ( 2 burners ) **ECO SWITCH**



If your device is equipped with two or three burners, you start the first burner as in the manual control of one burner (see left). To ignite the side burners or second burner press

 and  simultaneously.

To turn off the side burner or second

burner press 1 time on 

To turn off the main burner press the same button again. To switch off the entire stove (pilot light) press the button once more.

## 5. Thermostatic control






In case you want to go to a thermostatic control, you follow the next steps:

Press 2x the  button until you see the screen with the symbols shown in figure 2. Press  or 

until the symbol:  and  are blinking (fig. 2).

Confirm your choice by pressing  ( fig. 3).

Choose a temperature with the "up" and "down" arrows (fig. 4). Don't place the remote control near the fire. The temperature sensor is in the remote control.

To get back to manual control do the same until  and  are blinking. Confirm with 

## 6. ECO WAVE

**ECO WAVE:** each model is standard delivered with ECO-WAVE.


ECO-WAVE is an automatic cycle of fluctuating flames.

At each start-up of the fire, the system starts in

ECO-WAVE mode!




Switch off WAVE

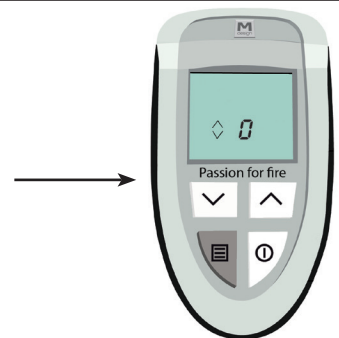



 Symbol that indicates that WAVE is enabled

Press 1x short on the menu button and "1" appears (= Wave on)

Press the arrow up or down. "0" appears (=Wave uit) confirm with 

## Shut down fire

Press 1 x  to turn off the stove. With 2 or 3 burners, press a second time on 

The pilot light continues burning and must continue to burn the entire heating season ( see manual )